

JET-5428 FB DIMM Current Measuring Extender

JET-5428 提供方便及簡易的方法，來量測 FB DIMM (Full Buffer DIMM) 記憶體模組的 VDD 及 VCC 消耗電流。僅需將待測 FB DIMM 插入 JET-5428 的插槽，以電壓表量測 JET-5428 CSR (Current Sensing Resistor) 兩端，經換算求得消耗電流。



User Guide :

1. **FB DIMM VCC Measuring:** Measure the voltage drop across the R2 CSR (Current Sensing Resistor 10m ohm), to get the current measurement.
2. **FB DIMM VDD Measuring:** Measure the voltage drop across the R3 CSR (Current Sensing Resistor 10m ohm), to get the current measurement.
3. User can remove the CSR and connect an ampere meter across the CSR pins to perform current measurement.

Contact Information:

TEL : 886-2-8647-2998

FAX : 886-2-8647-2997

E-mail : jujet@eztest.com.tw



嘉捷實業股份有限公司
JU-JET ELECTRONICS CO., LTD.
台北縣汐止市大同路三段 204 號 4F-1